


HOME DECORATORS C O L L E C T I O N

HDC# 16712 MFG# TW-19442AB / TW-19442AC
KENDALL MIRROR 32"Hx25"Wx1.5"D

ASSEMBLY INSTRUCTIONS

Note: Before assembly, please be sure to work on a soft, flat surface to avoid any damage to the finish.


Made In China

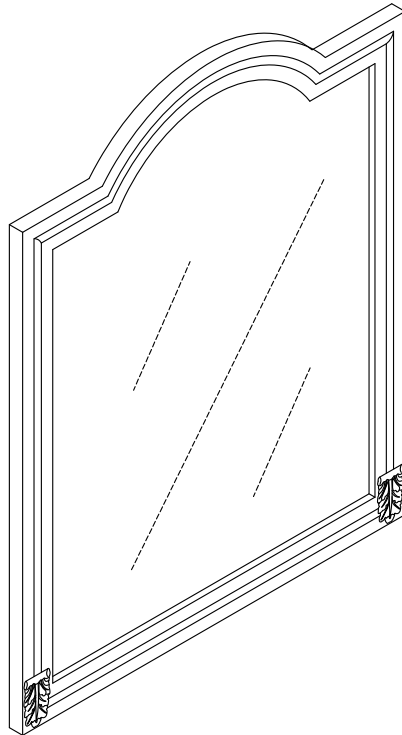


BEFORE ASSEMBLY

IMPORTANT NOTE: READ CAREFULLY BEFORE ASSEMBLY TO PREVENT DAMAGE TO PARTS. Following instruction listed below in the proper sequence as numbered to assure fast, easy and correct assembly.

ASSEMBLY TOOLS REQUIRED

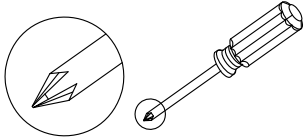

"+"Screw driver

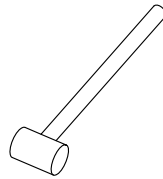


Rubber Mallet




Electric drill

PARTS LIST

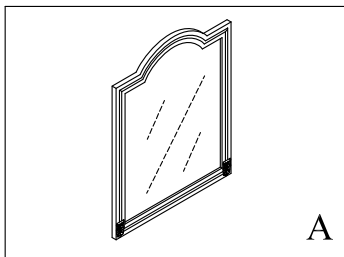

HARDWARE LIST

GECKO
FLAT HEAD SCREW
2 SETS



(1)

USE ELECTRIC DRILL TO DRILL 2 SMALL HOLES ON THE DESIRED LOCATION OF THE WALL. INSERT THE 2 GECKOS INTO THE HOLES BY RUBBER Mallet. INSERT 2 FLAT HEAD SCREWS INTO 2 GECKOS AND THEN HANG UP THE MIRROR ON THE WALL AS SHOWN.

